BELMONDO logo (KRAIBURG)
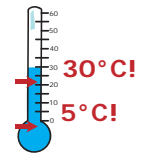
BELMONDO® Step

prerequisites:

concrete:
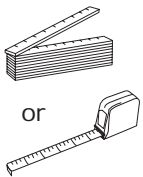- minimum 10 cm thick
- no holes
- no elevations

mats:
even temperature:
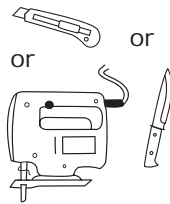minimum 5° C to maximum 30° C
(Store accordingly!)

30°C!
5°C!

You will need this:

measuring:

or

marking:

or

cutting:

or   or

drilling and installing:

KRAIBURG fastening elements:
- nail plugs ø 10 x 80 mm - A2
- washers ø 30 mm - A2

(or fastening elements with at least the same resistance and durability)

Guidelines for trafficability

BELMONDO® Step can be driven on up to maximum 10 % slope with standard equipment such as farm yard loader or tractor with authorized pneumatic tyres at the recommended inflation pressure up to max. 4 bar.
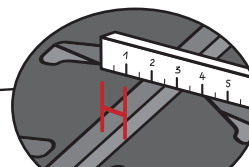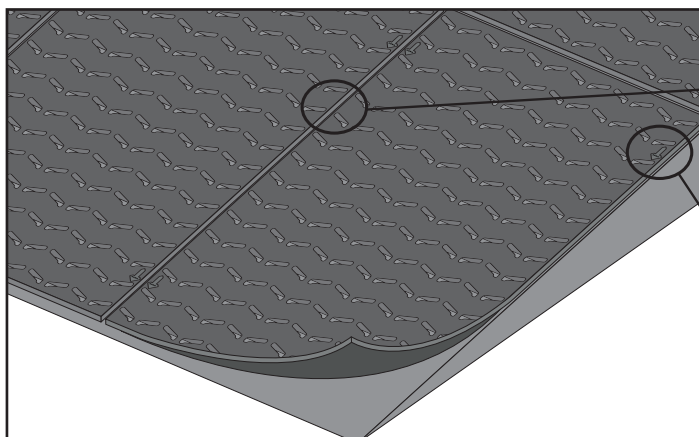
The mat edges must be protected at the beginning and at the end of the mat surface.

Notice:
- maximum half walking speed (about 2 km/h)
- only drive straight / do not steer any radius
- do not accelerate or brake on the mat
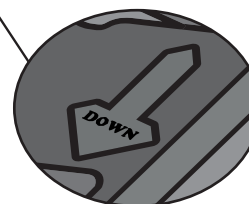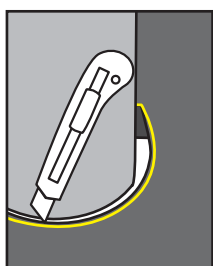
1 Lay out mats

distance at the mat edges: approx. 1 cm

approx. 1 cm
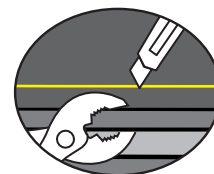
the arrows designating "DOWN" point downhill

2 Adaptation

if necessary, cut mats to fit
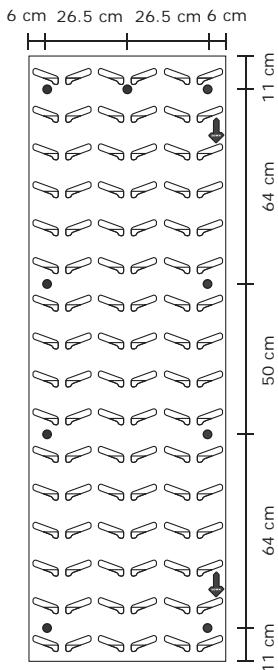
tips for cutting:
- moisten the blade lightly
- bend the mats / pull them slightly apart
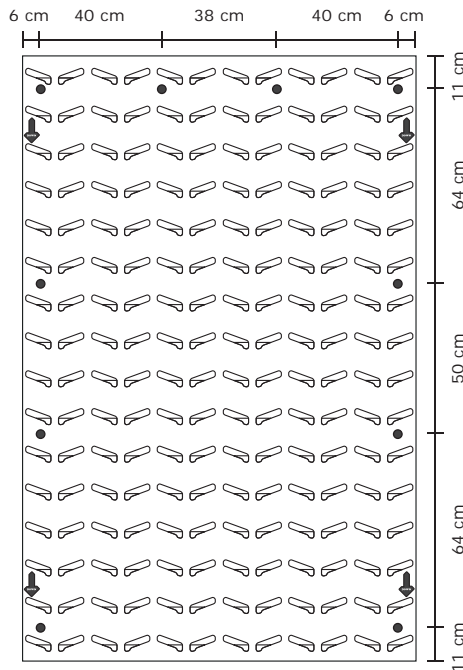- possibly lay a board underneath - score - cut
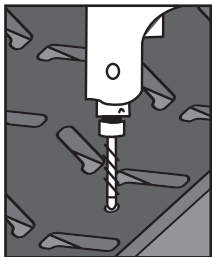
- use pliers for pulling small pieces apart

③ Fasten

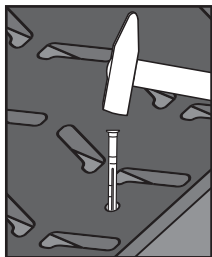**mat size 65 x 200 cm:**
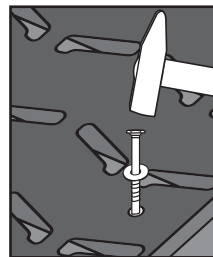at least 9 fastenings / mat

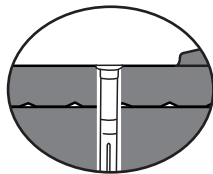**mat size 130 x 200 cm:**
at least 10 fastenings / mat
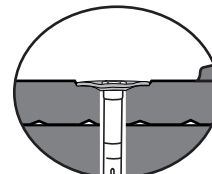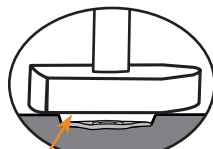
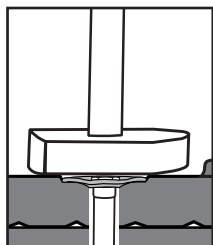Fasten at the points specified above:

drilling

pound the plastic plugs in fl ush

pound in nails and washers until they are seated evenly fast and are slightly countersunk

tip:
check to see if the fastening can be felt with a flat object made of metal (e.g. hammer) by sliding it over the fastening. If it can be felt, pound it in deeper!
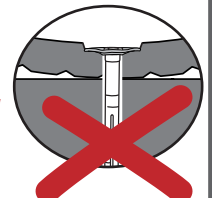
a small gap should be visible

! do not pound in too strongly!

no tension should develop, mat should not bulge!

ⓘ Appropriate installation may differ due to local conditions. Therefore the manufacturer is not liable for installation!